


Temporary Edge Protection System for Vehicle Loading & Unloading



J-Safe Vehicle Restraint System (VRS)

Collective protection system designed to be installed without accessing the trailer bed.
Only 3 components, all delivered in one storage container.
Assembly time approx 15mins 2 men, 13.6mtr trailer bed.

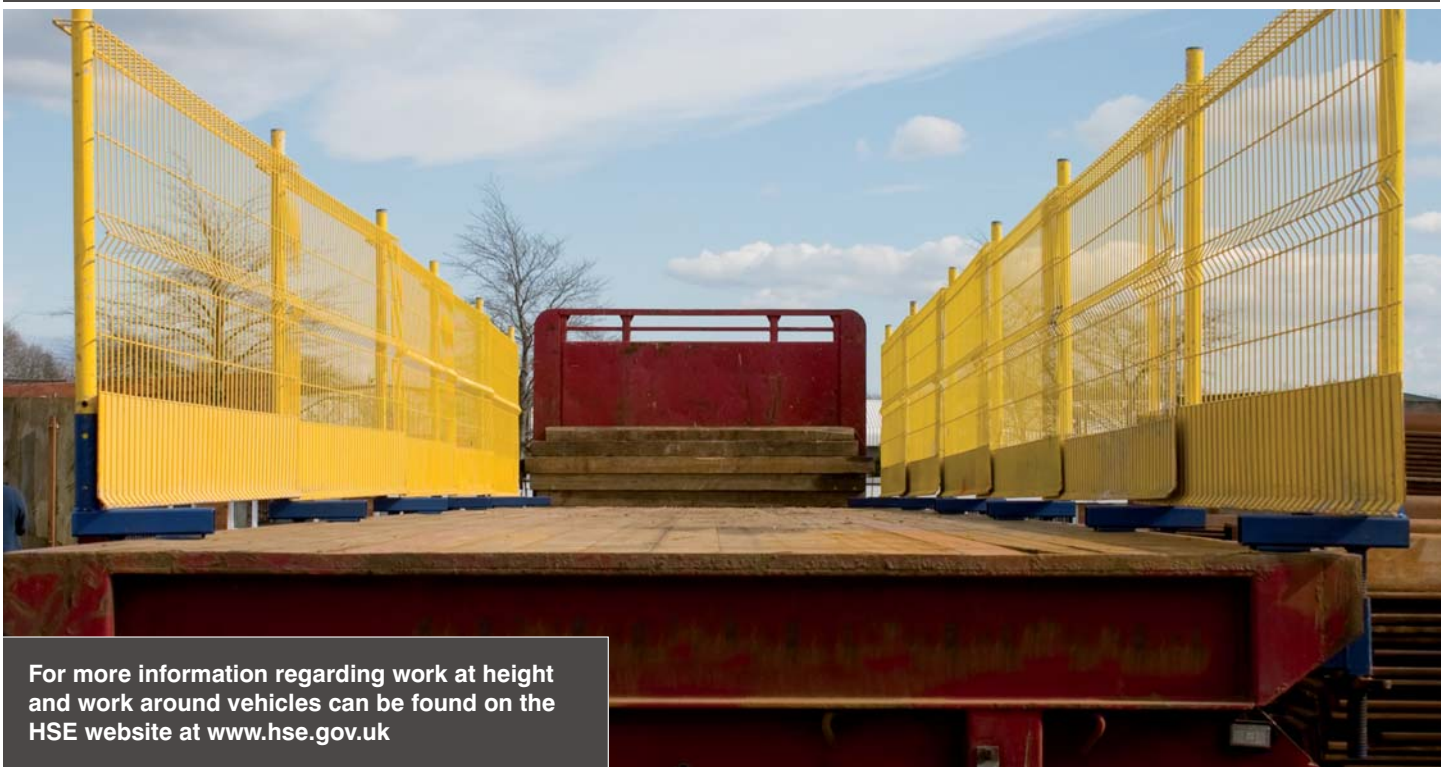

For more information regarding work at height
and work around vehicles can be found on the
HSE website at www.hse.gov.uk

Temporary Edge Protection System for Vehicle Loading & Unloading

Only 3 Components, for fast installation.

Clamp



Delivered in purpose
built storage container

Post



Video available at:
[youtube.com/jsafelimited](https://www.youtube.com/jsafelimited)

Barrier



Address: J-SAFE Limited,
Heslop,
Halesfield 24,
Telford
TF7 4NS

Telephone: +44 (0)1952 583041
Facsimile: +44 (0)1952 586342

Email: info@j-safe.co.uk
Web: www.j-safe.co.uk
www.youtube.com/jsafelimited

Call us now on Freephone
0800 169 1870